

ILFORD GALERIE

GENERIC PRINTER DRIVER SETTINGS

Should a printer profile or printer setting not exist for your specific model of printer, ILFORD recommend the following generic printer settings.



1. PHOTOGRAPHIC PAPERS

Gold Fibre Silk, Mono Silk & Warmtone*, Gold Fibre Gloss, Gold Raster Silk, Semi Gloss Duo, Gloss Pearl & Lustre Papers 310/290/260gsm

Epson® Printers:

Media Type: Epson Ultra Glossy or Premium Semigloss Photo Paper

Print Quality: Photo or Best Photo

Color Control: Epson Vivid

Canon® Printers:

Media Type: Photo Paper Plus Glossy

Print Quality: High

Color Control: Auto

HP® Printers:

Media Type: HP Advanced Photo Paper

Print Quality: Best

Color Control: ColorSmart/sRGB or default

**Gold Fibre medias are recommended for use with Pigment Ink Printers only*

ILFORD

GALERIE

2. FINE ART PAPERS

Smooth and Textured Cotton Rag, Cotton Artist Textured, Fine Art Smooth, Washi Torinoko, Heavyweight Matt, Premium Duo Matt

Epson® Printers:

Media Type: UltraSmooth Fine Art Paper or Enhanced Matte Paper

Print Quality: Photo or Best Photo

Color Control: Epson Vivid

Canon® Printers:

Media Type: Other Fine Art Paper or High Resolution Paper

Print Quality: High

Color Control: Auto

HP® Printers:

Media Type: HP Premium Paper

Print Quality: Normal or Best

Color Control: ColorSmart/sRGB or default

3. CANVAS

Canvas Natural, Smooth Fine Art Canvas, Satin Canvas

Epson® Printers:

Media Type: UltraSmooth Fine Art Paper or Enhanced Matte Paper

Print Quality: Photo or Best Photo

Color Control: Epson Vivid

Canon® Printers:

Media Type: Other Fine Art Paper or High Resolution Paper

Print Quality: High

Color Control: Auto

HP® Printers:

Media Type: HP Premium Paper

Print Quality: Normal or Best

Color Control: ColorSmart/sRGB or default